

Instruction Manual

EnviroLight Solar Street & Parking Lot Light





Overview:

Our EnviroLight solar street light which integrates the efficient solar panel, LED light and the Li-Fe battery into a single product. It operates with human intelligence induction system to become the solution of low-energy, durable, high-luminance and free maintenance.

Purpose:

For garden, residential area, courtyard, streets, walkways, parking lots, docks & piers, remote and rural area, etc. The high efficient solar panel absorb solar energy at day time, charge the battery which provide energy for the light at night.

Components:

- High efficient solar panel (Built-into the Fixture/Box)
- Li-Fe battery (Built-into the Fixture/Box)
- LED light (Built-into the Fixture/Box)
- MPPT controller (Built-into the Fixture/Box)
- Human intelligence induction system/motion sensor (Built-into the Fixture/Box)
- Bracket (For Mounting)

How it works?

The solar panel converts sunlight into electricity and stored in Li-Fe battery via controller, the LED light will work at night automatically under the light sensor control, and provide light for the different areas. And there are two modes for the light, they are full power mode and power saving mode. When the motion sensor senses movement, it will operate in full power mode. It will operate in power saving mode when it does not senses any movement around.



Data and Specification:

Model			EnviroLight-SX-200W	
Specifications				
Solar panel			50W	
Battery			12.8V 30AH	
Motion sensing			YES	
Dimension			36.2" x 12.8" x 5.5"	
net weight			27.56 LBS	
Light efficiency				
Luminous	Full load working		2500 – 2750lm	
Flux	Less load working		800lm	
Visual angle			120°	
Color temperature			6000k-6500k	
	Full power		~10Hr	
Work time	Saving mode		~20Hr	
Operating temperature				
Work temperature		-22 - 158 Degree Fahrenheit		
Recommended Placement Info.				
Recommended mounting height		5 – 6m from ground level	5 – 6m from ground level	6 – 7m from ground level
Recommended Distance (Light to Light)		50ft – 65ft	65ft – 70ft	70ft – 75ft



Assembling and Installation:

Step 1:

Open the box and prepare all the parts you need.




Step 2:Unscrewing the screw of the light fixture/box for installing bracket.





Step 3:Screw and hold one end of the mounting support tube to the light fixture/box.

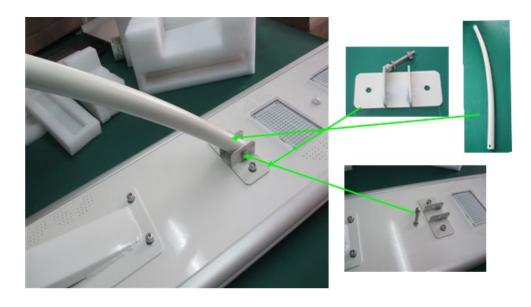


Step 4:Connect the pole mount bracket with the support tube.






Step 5:

Insert the fuse into the light fixture/box. Unfold the knob of fuse (see below) and take out the insulating film of the fuse socket. Make sure the fuse is working, then tighten.

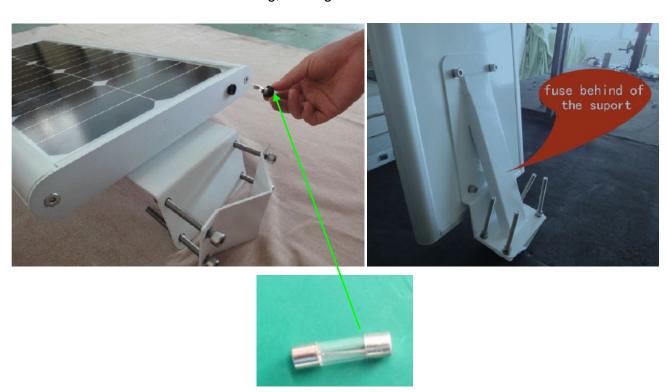

Step 6:Mount the light fixture/box on the pole.

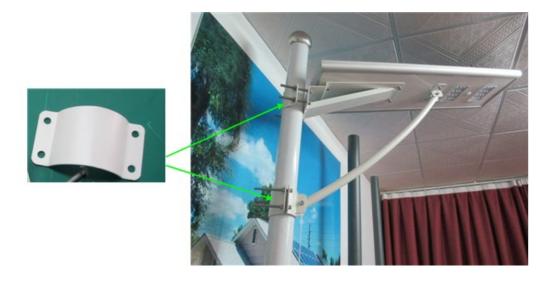



Step 7:

Turn on the switch. And this is how it looks when it is installed on a pole.



Reminder:

- EnviroLight solar street light adopts the long life Lithium battery for storing energy, charging temperature at day time is between: 0°C~+60°C, when temperature goes lower than 0°C, the control system will stop automatically to protect the battery, and it will revive to charge the battery while temperature goes higher than 0°C. Discharging temperature at night is between: -20°C~+60°C, any ambient beyond will bring damage to the battery. Please confirm your local extreme temperature is suitable for above while selecting the street light.
- Battery of the light can be stored for 6 months long after full charged, and please examine, charge it periodically after long time transportation to prevent damage.
- Keep clearing the surface of the EnviroLight solar street light with normal detergent to get maximum power generation, clear the dust or tree leaves or any grease.
- While installing in Northern Hemisphere, please make sure the surface of the solar panel is facing the South to absorb maximum sunshine radiation. While installing in Southern Hemisphere, please make sure the surface of the solar panel is facing the North to absorb maximum sunshine radiation. At the same time, please keep it away from any shadow of house, trees etc. Meanwhile, you can adjust the angel between the lamp head and level (as follows), you'd better reconcile the lamp head with local latitude.
- Fuse holder built on the light housing, please take off the isolation film for first time use. One piece of fuse 5A(220V) is offered for backup.



