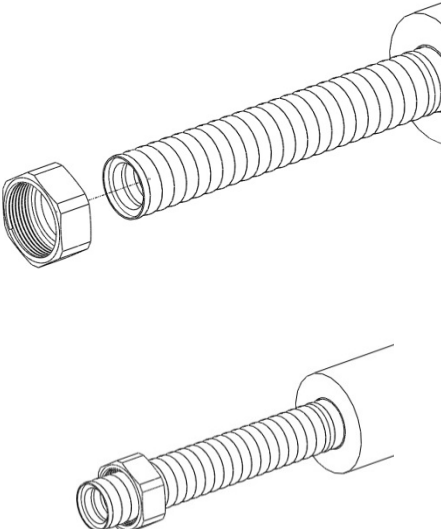
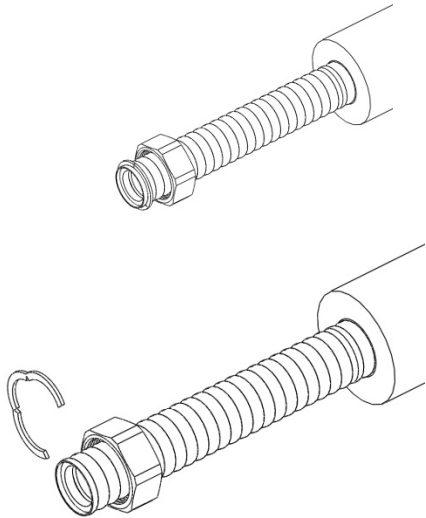
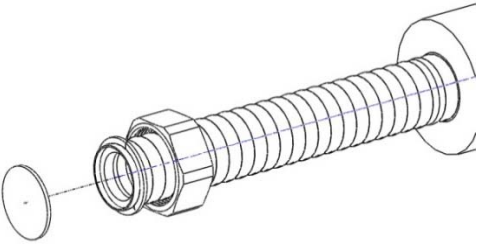
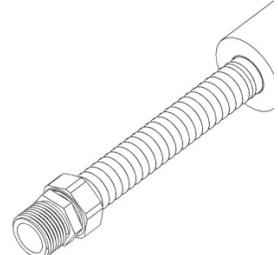
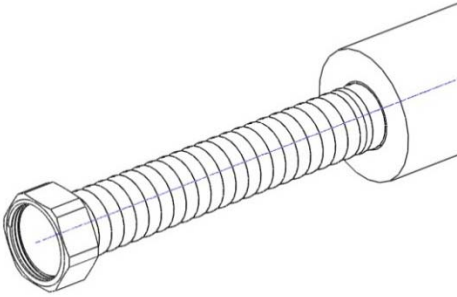
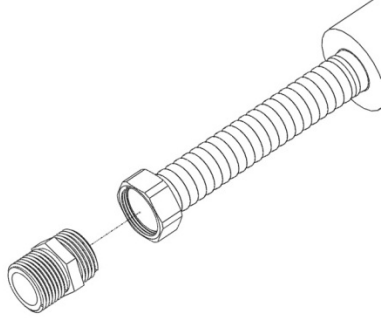


1	2
<p>Place nut over the corrugated line set</p>	<p>Bend "C" clamp around 1st corrugation in front of Nut</p>
	
3	4
<p>Place aluminum slug at the end of the corrugated line. Bring the nut up to position holding the slug in place.</p>	<p>Tighten down the fitting, compressing the slug</p>
	
	

5	6
<p>Remove the fitting and slug. The end of the corrugated line set should now be flattened and ready to be fitted.</p>	<p>Reattach the fitting to the nut, inserting a graphite washer between it and the nut.</p>
